



FULL MANUAL · EN

# CEE COACH PLUS

**Wireless communication system for rider and instructor**

*Powering on, pairing units, connecting your headset and every function in detail.*

# CONTENTS & HOW IT WORKS

With the **CeeCoach Plus** you talk to your instructor while riding, without shouting and without a phone. Every participant wears their own unit; the units form a group and work up to **700 meters** apart. We deliver your units **already paired**: just switch them on. If you add a unit later, or the pairing is lost, chapter 3 shows you how to pair them again yourself.

1

## One unit per person

On the belt or upper arm. Up to 16 participants in one group, all audible at once.

2

## Add a headset

The supplied wired headset, or your own Bluetooth headset or open-ear earphones.


3

## The light ring tells you everything

Its color and flashing show whether you are connected, how full the battery is and whether the microphone is on.


## Contents

|   |                                       |       |
|---|---------------------------------------|-------|
| 1 | The unit: buttons & light ring .....  | p. 3  |
| 2 | Power on/off & charging .....         | p. 4  |
| 3 | Pairing units: making a group .....   | p. 5  |
| 4 | Volume, mute & key lock .....         | p. 6  |
| 5 | Headset: wired or Bluetooth .....     | p. 7  |
| 6 | Wearing: belt clip or upper arm ..... | p. 8  |
| 7 | Reset, software & care .....          | p. 9  |
| 8 | Troubleshooting .....                 | p. 10 |
| 9 | Specifications & contact .....        | p. 11 |

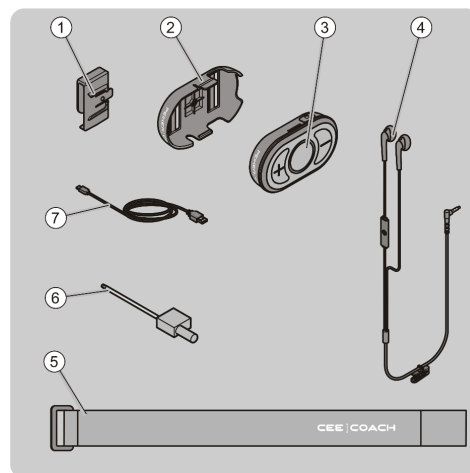

*In the box: 1 belt clip · 2 bracket · 3 unit · 4 headset · 5 arm strap · 6 screwdriver · 7 USB-C cable*

# THE UNIT: BUTTONS & LIGHT RING

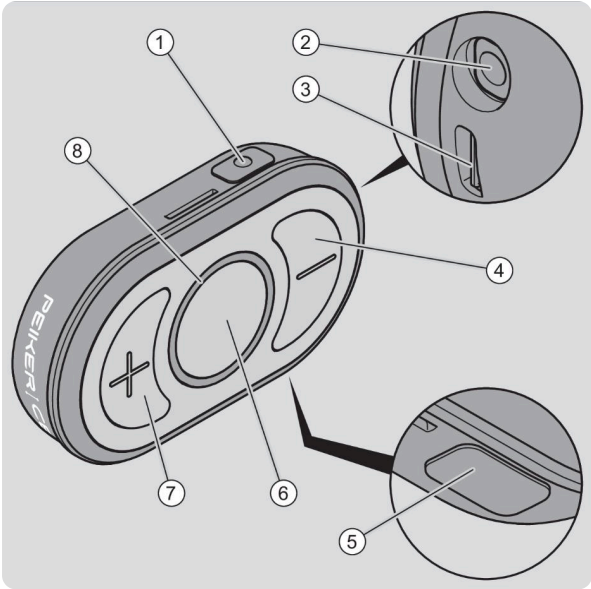

The buttons and connections


## Buttons and connections

- ① **Top function button** — pair units (together with 5).
- ② **Headset socket** — 3.5 mm, for the wired headset.
- ③ **USB-C** — charging and software update.
- ④ **Minus** — volume down.
- ⑤ **Side function button** — pair units (together with 1) and connect a Bluetooth headset.
- ⑥ **Main button** — power on/off (long press) and mute (short press).
- ⑦ **Plus** — volume up.
- ⑧ **Light ring** — 12 LEDs, see below.

## What the light ring means

|                     |                                                                                     |
|---------------------|-------------------------------------------------------------------------------------|
| ● Green             | Connected; at least one other unit is in range. At power on/off: battery above 70%. |
| ○ White             | Not paired with other units. After 5 minutes the unit switches itself off.          |
| ● Cyan (light blue) | Paired, but no other unit in range. Here too: automatic power off after 5 minutes.  |
| ● Yellow / orange   | At power on/off: battery between 30 and 70%.                                        |
| ● Red               | At power on/off: battery almost empty (below 30%). Charge it.                       |
| ● Blue, rotating    | Ready to connect a Bluetooth headset (chapter 5).                                   |
| ● Magenta, flashing | Microphone is off (mute). Others can't hear you.                                    |
| ● 4 LEDs flashing   | Key lock on: at 12, 3, 6 and 9 o'clock the LEDs flash in the connection color.      |
| ● Ring fills up     | Volume (with plus/minus) or pairing (30 seconds, chapter 3).                        |

# POWER ON/OFF & CHARGING

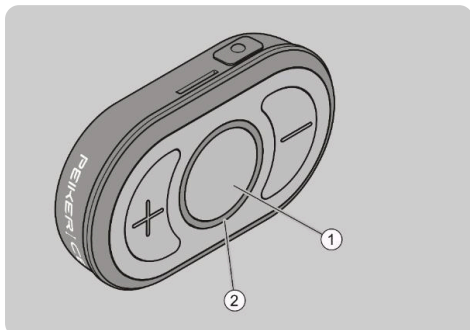

Main button (1) and light ring (2)

## Power on


- 1 Hold the **main button** (the big round button in the middle) for at least **3 seconds**.
- 2 The light ring turns green, yellow or red for 3 seconds (the battery level) and you hear *"Power on"*.
- 3 Then one LED flashes: **green** if another unit is in range, **white** if the unit is not paired, **cyan** if the others are too far away.

## Power off

Hold the main button for 3 seconds again. You hear *"Power off"*.

### Switches itself off

If no other unit is connected for 5 minutes (ring white or cyan), the unit switches itself off to save battery. So switch on all units before you start.

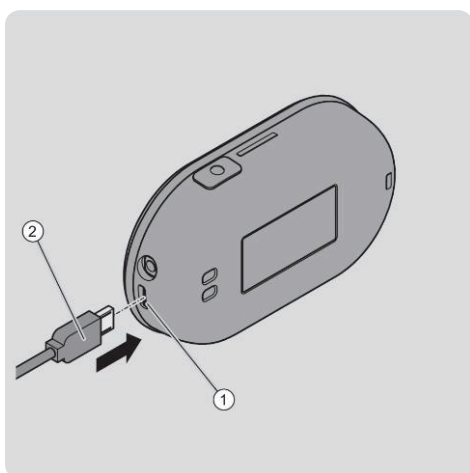

USB-C socket (1) and cable (2)


## Charging

- 1 Plug the small end of the USB-C cable into the unit and the large end into a USB charger (phone charger).
- 2 Charging takes up to **3 hours**. When the battery is full, the light ring stays green while the cable is plugged in (unit off).
- 3 A full battery lasts up to **18 hours** of talking. Charge when the ring is red or yellow.

Want to check the battery without charging? Switch the unit on or off: the ring color tells you. Charge between +5 and +45 °C and never leave the unit unattended on the charger.

# PAIRING UNITS: MAKING A GROUP

Units that are paired form a **group**: everyone hears everyone. Your units are already paired on delivery. You only need to pair when you add an **extra unit**, combine units from different sets, or lose the connection after a reset.

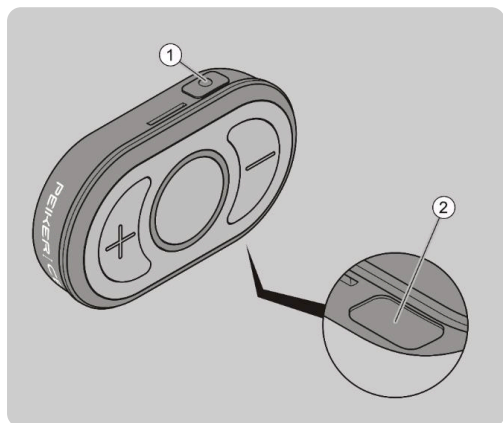

Press both function buttons at once: top (1) and side (2)

## How to pair the units

- 1 Place all units that belong together **within 10 meters** of each other and switch them **on**.
- 2 On the first unit, press the **two function buttons** (top and side) **at the same time** for at least 1 second. The light ring starts to fill.
- 3 Do the same on every other unit, **within 30 seconds**. All units with a filling ring now search for each other.
- 4 When the ring is full you hear "*Device connected*" and the ring flashes **green**. Done: the units are paired and remember each other, even when switched off.

Does the ring flash **white** after 30 seconds? Then it didn't work. Move the units closer together and repeat steps 2 and 3, one right after the other.

## Adding an extra unit

Pairing always involves the **whole group** at once: switch on all units, including the existing ones, and follow the steps above with all of them. Pairing only the new unit doesn't work.

## Making a new group

Want to combine other units, for example two riders with one instructor? Follow the steps with exactly the units that belong in the new group. A unit is in one group at a time; the old pairing is dropped.

### Tips for smooth pairing

First switch off the key lock if it's on (chapter 4). Work in pairs: one unit each, pressing together on "now". All units must have the **same software** (chapter 7); if in doubt, we can help.

### Only CeeCoach Plus with CeeCoach Plus

The Plus doesn't pair with the older CeeCoach 1 or 2. Mixing isn't possible; that's not your fault or the unit's.


# VOLUME, MICROPHONE & KEY LOCK

## Volume

Press **plus** for louder and **minus** for softer. With each step the ring fills or empties by one segment. Fully green ring = maximum volume; one LED = minimum. Hold the button to go faster.

### Protect your hearing

Don't listen at the highest volume for long. With an open-ear headset you also hear your surroundings, so the volume can often be lower.

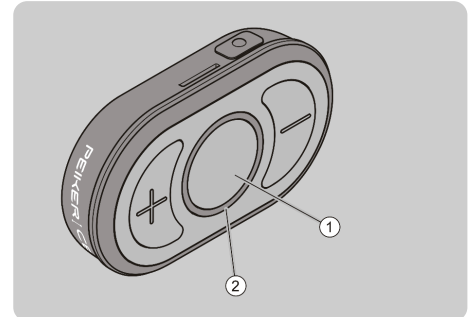

Mute: short press on the main button (1); ring (2) flashes magenta

## Microphone off (mute)

- 1 Press the main button **briefly**. You hear "Mute on" and the ring flashes **magenta**. Others no longer hear you; you still hear them.
- 2 Press briefly again: "Mute off", and you can be heard again.

Handy when the instructor talks to someone else, or when there's a lot of wind on the microphone.

## Key lock


- 1 Hold **plus and minus together** for 3 seconds. Four LEDs (at 12, 3, 6 and 9 o'clock) flash in the connection color: the buttons are locked.
- 2 To turn it off: plus and minus together for 3 seconds again, until one LED flashes. Or switch the unit off and on.

This way you won't press mute or pairing by accident while riding.

# HEADSET: WIRED OR BLUETOOTH

## Wired headset

Plug the supplied headset into the **3.5 mm socket** on top of the unit. Done. Wear the headset and the unit on the **same side** of your body to reduce interference. If a Bluetooth headset is also paired, the wired one takes priority as soon as you plug it in.

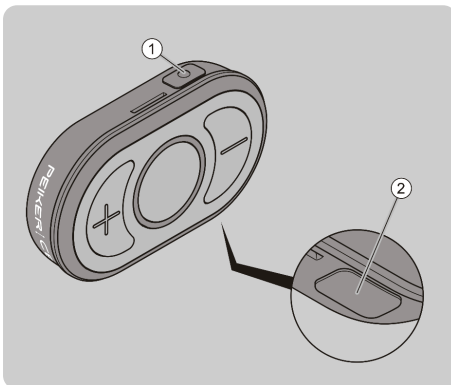

Side function button (2): ring rotates blue

## Connecting a Bluetooth headset or earphones

- 1 Switch on the unit.
- 2 Switch on the headset and put it in **pairing mode**. The headset's manual explains how; often an LED then flashes blue.
- 3 On the unit, press the **side function button** (the flat button, number 5). The light ring rotates **blue**.
- 4 Within about 30 seconds the unit and headset are connected. No phone needed.

Once paired, they connect automatically whenever you switch on the unit.

## Pairing a different headset

First switch off the headset that is currently connected. Then pair the new one as described above.

## Not working?


Is the headset really in pairing mode? Is its battery full? Some headsets remember only a few devices; delete an old pairing in the headset.

### Horse Watch open-ear earphones

If you order the CeeCoach Plus with our open-ear earphones, we pair them in advance. Just switch them on; the unit finds them automatically.

# WEARING: BELT CLIP OR UPPER ARM

Wear the unit on your belt or upper arm, always on the same side as your headset. The more freely the unit hangs, the better the range. Within a group, everyone should preferably wear it on the same side.

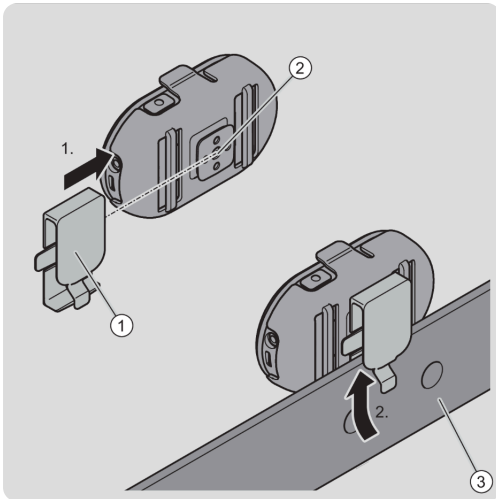


Slide the belt clip (1) onto the bracket (2) and hook it onto the belt (3)

## On the belt

- 1 Click the **bracket** onto the back of the unit. The bracket turns in 90° steps, so the buttons always sit right.
- 2 Slide the **belt clip** over the bracket until the lever clicks audibly into place.
- 3 Hook the clip over your belt, or thread the belt through the clip.

To remove: lift the clip's tab and pull the unit with clip off the belt. To take the clip off the unit: lift the lever and slide the clip off.

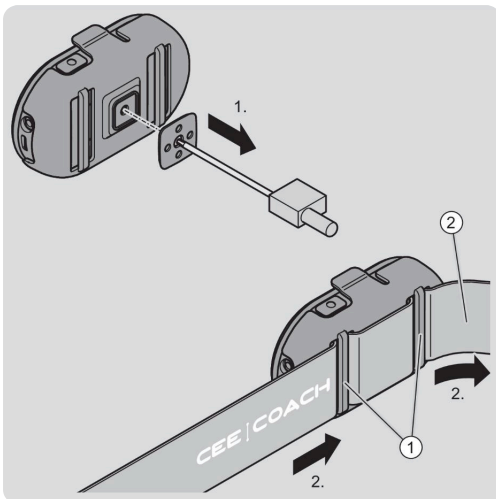

Unscrew the bracket (1), thread the arm strap (2) and wear it on the upper arm


## On the upper arm

- 1 Unscrew the bracket from the clip with the supplied screwdriver.
- 2 Thread the **arm strap** through the loops of the clip and pull it all the way through.
- 3 Put your arm through the loop and pull the strap firmly around your upper arm.

### Don't drop it

The unit is splash-proof and dustproof (IP67), but can't take hard knocks. Fasten it well and don't let it dangle by the cable.

# RESET, SOFTWARE & CARE

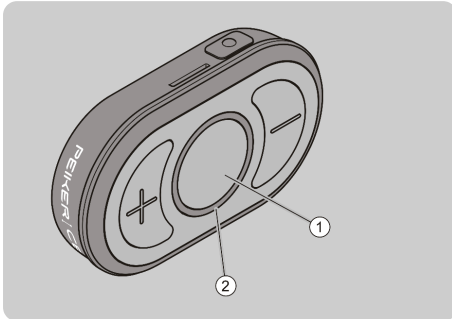

Reset: main button (1) + plus + minus for 5 seconds; ring (2) turns green, white, orange

## Back to factory settings

Is the unit acting up, or do you want to delete all pairings? Reset it:

- 1 Switch on the unit.
- 2 Hold the **main button, plus and minus together** for more than **5 seconds**.
- 3 The ring lights up green twice, then white, then orange. The unit switches off.

### Pair again afterwards

A reset deletes the pairing with the other units and with your Bluetooth headset. Then repeat chapter 3 (and 5) with all units in the group.

## Software update

All units in a group must have the same software version, otherwise pairing may fail. Update with the peiker CEE **update app** for Windows or Mac ([www.peiker-cee.de](http://www.peiker-cee.de)): install the app, connect the unit to the computer with the USB-C cable, follow the app.

Rather not do it yourself? Send us the units and we'll put them all on the same version.

## Cleaning and storage

- Wipe the unit and headset with a **slightly damp cloth**; for stubborn dirt, a little dish soap. No harsh cleaners.
- Store dry and dust-free, for example in the pouch.
- Always pull the headset out by the plug, never by the cable.
- Use between  $-10$  and  $+45$  °C.

# SOLVING PROBLEMS

## Pairing fails (ring flashes white)

- 1 Are all units **within 10 meters** of each other and all switched **on**?
- 2 Did you press both function buttons on **all** units **within 30 seconds**? Do it with several people at once.
- 3 Is the **key lock** on (four flashing LEDs)? Switch it off first with plus + minus for 3 seconds.
- 4 Still no luck? Reset all units (chapter 7) and pair again. If it keeps failing, the software may differ: call us.

## I can't hear anyone, or no one hears me

- 1 Is your ring flashing **magenta**? Your microphone is off: press the main button briefly.
- 2 Ring **cyan**? You're too far from the others. Move closer; the connection recovers by itself.
- 3 Ring **white**? The unit isn't paired. See chapter 3.
- 4 Is the headset plug in properly, or is the Bluetooth headset on and charged?

## Someone dropped out of the group and won't come back

- 1 Normally the connection recovers by itself once someone is back in range.
- 2 If not, have that person switch the unit **off and on again**.

## Unit switches off by itself

- 1 That's normal after 5 minutes without a connection (ring white or cyan). Switch on all units first, then it stays on.
- 2 Does it switch off with a red ring? Battery empty: charge it.

## Sound crackles or drops out at a distance

- 1 Wear unit and headset on the same side of your body, and in the group everyone on the same side. Let the unit hang free, not under a thick jacket.

**Still stuck?** Call or message us on +31 (0)418 51 60 28 and tell us the ring color; that usually tells us enough.

# SPECIFICATIONS & CONTACT

|                        |                              |                  |                             |
|------------------------|------------------------------|------------------|-----------------------------|
| Participants per group | 2 to 16                      | Light ring       | 12 multicolor LEDs          |
| Range                  | up to 700 m (line of sight)  | Protection class | IP67, splash- and dustproof |
| Pairing distance       | max. 10 m                    | Dimensions       | 97 × 57 × 22 mm             |
| Headset                | 3.5 mm jack or Bluetooth 5.0 | Weight           | 96 g                        |
| Talk time              | up to 18 hours               | Operating temp.  | −10 to +45 °C               |
| Charging time          | up to 3 hours, USB-C         | Charging temp.   | +5 to +45 °C                |
| Battery                | Li-ion 2000 mAh              | Warranty         | 2 years (peiker CEE)        |

## In the box (per unit)

Unit, wired headset, belt clip, bracket, arm strap, screwdriver, USB-C cable. Optional: open-ear earphones, extra unit, storage pouch. The CeeCoach Plus is compatible with other CeeCoach Plus units, not with CeeCoach 1 or 2.

**Need help? We're happy to help**

● MESSAGE US

**+31 (0)418 51 60 28**

Mon–Fri 9:00–17:00 · We reply on WhatsApp

**Prefer to call or email?**

Call the same number or email [info@horse-watch.nl](mailto:info@horse-watch.nl) · [www.horse-watch.nl](http://www.horse-watch.nl)