



MANUAL · EN

AIR GO LED CORDLESS

Cordless fan on a power bank

Set up, hang, operate and use safely.

CONTENTS & HOW IT WORKS

The Horse Watch AirGo is a powerful fan that works **without a power outlet**: it runs on the included power bank. Hang it in the trailer, on the stable post or at the show grounds and your horse stands in a breeze. Nine speeds and mood light, so you can see it in the dark too.

1

Power bank in

Cable into the fan, power bank into the holder, tighten the knob. That's all.

2

Hang it anywhere

On the stand, from its own hook, with the magnet on steel or with the straps on bars, a beam or a post.

3


Switch on and choose

One press of the button. Pick one of nine speeds and switch on the light if you like.

Contents

1	In the box & the parts	p. 3
2	Assembly: stand & power bank	p. 4
3	Operation: speeds & light	p. 5
4	Hanging: hook, magnet & straps	p. 6
5	Power & charging the power bank	p. 7
6	Safety, cleaning & storage	p. 8
7	Troubleshooting, specs & contact	p. 9

IN THE BOX & THE PARTS

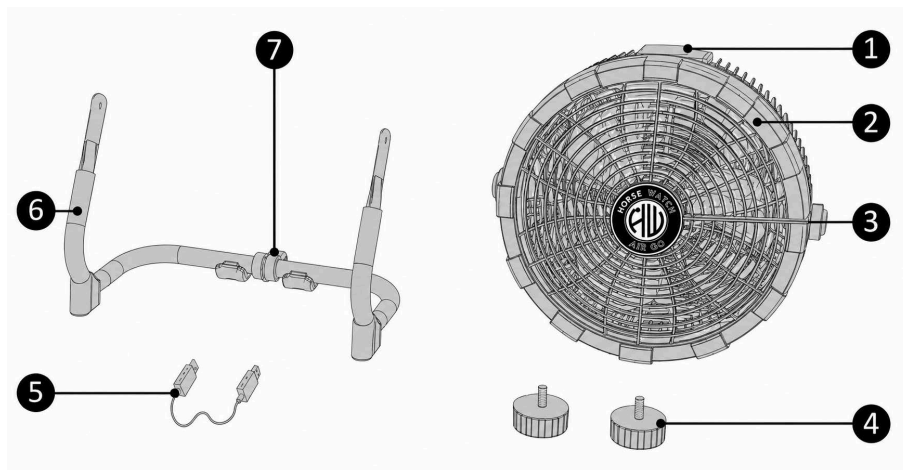

The parts of the AirGo LED Cordless

- | | |
|--|--|
| <p>1 Handle
for carrying the fan</p> | <p>5 USB-C cable
between power bank and fan</p> |
| <p>2 Fan
with protective grille front and back</p> | <p>6 Stand
for placing the fan down</p> |
| <p>3 Power bank holder & control panel
on the side of the fan</p> | <p>7 Hanging hook
rotates on the stand</p> |
| <p>4 Adjustment screws
to lock the airflow direction</p> | |


What's in the Horse Watch box

- **AirGo fan** with stand and hanging hook
- **Power bank** with holder, so the fan runs anywhere without an outlet
- **USB-C cable** to connect power bank and fan (and to charge the power bank)
- **2 nylon hanging straps** with snap hook and ring, to hang it on bars, a beam or a post
- **Hanging magnet** for steel walls, the trailer and the lorry
- **Storage bag** to keep everything together

Only the included power bank and cable

The AirGo needs 5 volts and at least 3 amps to run without stuttering. The power bank we include is chosen for that. Another power bank, adapter or cable may supply too little power or damage the fan.

ASSEMBLY: STAND & POWER BANK

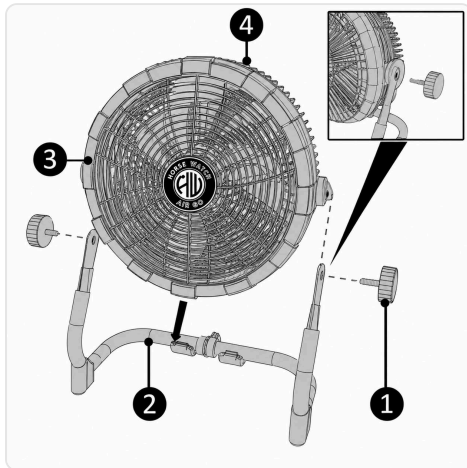


1 adjustment screws · 2 stand · 3 fan · 4 handle

Mounting the stand

- 1 Put the **stand** (2) on a flat, solid surface.
- 2 Hold the fan (3) in the middle of the stand, **handle** (4) up, and screw in the two **adjustment screws** (1).
- 3 Tilt the fan to the airflow direction you want and tighten the adjustment screws **clockwise**.

Always fully assemble the fan before you connect the cable and power bank.

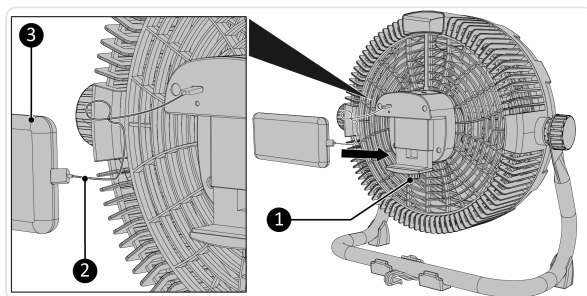

1 holder knob · 2 USB-C cable · 3 power bank


Inserting the power bank

- 1 Turn the **power bank holder knob** (1) **counterclockwise** to open the holder.
- 2 Plug the **USB-C cable** (2) into the power bank (3) and the fan's USB-C port.
- 3 Place the power bank in the holder.
- 4 Turn the knob **clockwise** until the power bank is held firmly.

Watch the cable

Make sure the USB-C cable never pokes through the grille or is wrapped tightly around the fan. Always unplug the cable from the fan when taking it apart or putting it together.

OPERATION: SPEEDS & LIGHT

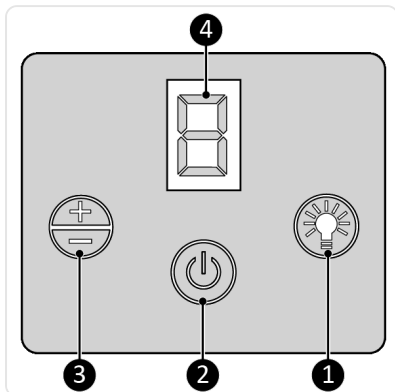

The control panel

- 1 Light button**
mood light on, dim, change colour or off
- 2 On/off button**
fan on or off
- 3 Fan speed button**
each press goes up one speed
- 4 Display**
shows the speed (1 to 9)

Switching on and off


- 1** Press the **on/off button**. The fan starts at speed 6; the display shows "6".
- 2** Press again to switch it off.

Choosing the fan speed

- 1** Press the **fan speed button**: each press goes up one speed, from 1 to 9.
- 2** After 9 it starts again at 1. Speeds 1 to 3 are the quietest and make the power bank last longest.

Mood light

Press the **light button** to cycle through the five settings:

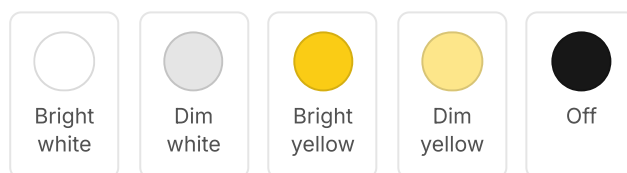


The AirGo on its stand, ready to use

Does the fan keep switching on and off?

Then it gets too little power, especially at high speeds. Switch it off and use the included power bank (5 volts, at least 3 amps) or charge it first.

HANGING: HOOK, MAGNET & STRAPS

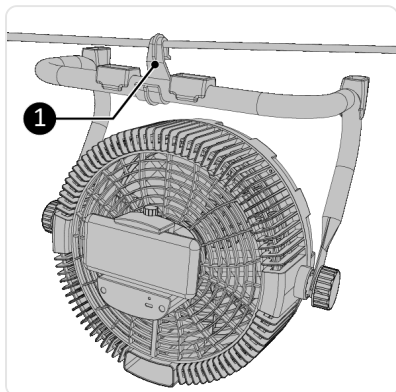

On the hook, buttons facing down

On the hanging hook

- 1 Rotate the **hook** (1) on the stand into position.
- 2 Hang the hook on a post, beam or tent pole that easily carries the weight (1.8 kg plus power bank).
- 3 Hang it so the **control buttons face down**; that way you can always reach them.

With the two hanging straps




Hanging strap: snap hook and ring

- 1 Loop a strap around the **bar, beam or post** and clip the snap hook into the ring: a sturdy loop.
- 2 Hook the fan into the loop with its **hanging hook** (or handle). Use the second strap for a second point, or to hang it higher.
- 3 Give it a firm tug to check, and look now and then that the hooks are still closed.

With the hanging magnet

- 1 Choose a **steel** surface that easily carries the weight: trailer wall, lorry or a steel stable wall.
- 2 Press the magnet on flat so it makes full contact, and hang the fan on it.
- 3 Give it a firm tug to check. To be safe, secure it with a hanging strap as well.

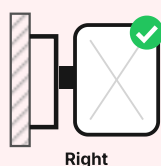

Mind the USB plug

Never hang the fan with the plug side flat against the wall: the USB-C plug will snap off. Always keep the **stand between the fan and the wall**, as a spacer.

Space around the fan

With the AirGo on its stand, keep 30 cm clear all around. Hanging on a wall or ceiling, that isn't needed: just keep the air inlet (back) and outlet (front) clear. Never hang it over water or a drinking bowl, and keep curtains, blankets and long hair away.

Out of reach of horse and child. Hang the fan high enough that your horse can't reach it and children can't operate or move it.

POWER & CHARGING THE POWER BANK

The AirGo runs on **5 volts** and needs **at least 3 amps**. The included power bank is chosen for that. If you use another power source, it must supply exactly the same values.

Four ways to power it

- **Power bank (standard).** Cable into the power bank and the fan, power bank firmly in the holder. Use it in the stable, trailer and at shows.
- **Wall outlet.** With a 5 V / 3 A USB-C adapter (not included) on a normal 220–240 V outlet.
- **In the car or truck.** With a 5 V / 3 A USB-C car charger in the cigarette lighter.
- **Laptop or computer.** Only via a USB-C port that supplies 5 V and 3 A; a regular USB port is usually too weak.

Charging the power bank

- 1 Take the power bank **out of the holder**. It gets warm while charging and needs to shed that heat.
- 2 Charge only with the **included cable**, on a regular phone charger.
- 3 Don't charge it while the fan runs on the same power bank.
- 4 Charge the power bank **fully** before first use and before a show day.

Make your power bank last for years

Use and store it between 10 and 30 °C; below 0 °C and above 50 °C the protection switches it off. Don't leave it in a closed car or trailer in the sun. Storing the AirGo for winter? Charge the power bank to about 70 %, take it out of the holder, keep it cool and dry, and top it up every 3 to 6 months.

Never do this

Never put more than 5 volts on the fan. Never open, pierce or throw the power bank in a fire, even if it's broken. If liquid leaks out, rinse with water and see a doctor if it gets in your eyes.

SAFETY, CLEANING & STORAGE

Safe use

- **Children** under 3 must be kept away; children from 8 only under supervision. Children must not play with it or clean it.
- **Use dry only**, indoors or outdoors. Not near taps, drinking bowls, pools or in the rain. Never submerge it or touch it with wet hands.
- **Never use without the grille**, and never put fingers, straws or anything else through the grille while it runs.
- Keep **long hair, blankets, curtains and clothing** away from the fan.
- **Not in full sun**, not above 40 °C, not near open flames, gas appliances or flammables (hay near the grille, spray cans).
- **Cable**: don't leave it where someone can trip, don't kink or coil it tightly, and always pull it out by the plug.
- **No dimmer, timer or remote** in between; no extension cord unless needed.
- **Damaged?** Dropped, cable broken, strange noise or smell? Switch off at once, disconnect and contact us. Don't open it yourself.
- **Don't blow continuously** on people or animals that can't move away.

Cleaning

- 1 Switch off the fan and disconnect the power bank and cable.
- 2 Dust the grille and outside regularly with a dry or slightly damp cloth.
- 3 No abrasives, bleach, alcohol or sprays, and never submerge it.

Storage

- 1 Let the fan cool down and clean it.
- 2 Take the power bank out of the holder if you won't use the AirGo for a while.
- 3 Store everything dry, cool and out of the sun in the storage bag; put nothing heavy on top.

Warranty and disposal

Horse Watch gives a 36-month warranty on the fan (the power bank is excluded). Normal wear and damage from misuse are not covered. Disposing of it? Not with household waste: hand the fan and power bank in at a recycling centre or to us, and they'll be recycled properly.

TROUBLESHOOTING, SPECS & CONTACT

Troubleshooting

- **Keeps switching on and off, especially at high speeds.** The power source is too weak. Switch off, charge the power bank or use the included power bank (5 V, 3 A).
- **Does nothing at all.** Is the cable firmly in on both ends and the power bank charged? Try the cable the other way round or charge the power bank first. Also try a different USB-C cable.
- **Runs, but weakly.** Check the speed on the display and that the grilles are free of dust, hay and cobwebs.
- **Power bank won't charge.** Only charge between 0 and 50 °C; let it reach room temperature first. Use the included cable.
- **Strange noise, smell or smoke.** Switch off and disconnect at once. Stop using it and contact us.

Type	AirGo LED Cordless	Lighting	white / yellow, bright or dim
Voltage	5 V DC via USB-C	Direction	manually tiltable
Power	max. 15 W	Protection class	III
Power source	5 V / min. 3 A	Weight	1.8 kg (without power bank)
Speeds	9 fan speeds	Dimensions	39 × 38 × 18 cm

Need help? We're happy to help

● MESSAGE US

+31 (0)418 51 60 28

Mon–Fri 9:00–17:00 · WhatsApp monitored

Prefer to call or email?

Call the same number or email info@horse-watch.nl · www.horse-watch.nl