




CEEEOACH PLUS · BLUETOOTH HEADSET

BLUETOOTH HEADSET

Connecting your CEEEOACH Plus to a Bluetooth® headset or earphones.

You can use the CEEEOACH Plus with the wired headset from the box or with a Bluetooth® headset or earphones. This is how to connect them:

- 1 Switch the **CEEEOACH Plus on** (hold main key 6 for at least 3 seconds).
- 2 Switch the **Bluetooth headset on**.
- 3 Put the headset in **pairing mode**. See the headset manual for how; usually a blue light flashes.
- 4 Press the **function key (5)** on the side of the unit. The light ring lights up **blue** and rotates: the unit is now searching for the headset.
- 5 Once connected, the rotation stops. From now on you hear everything through the headset.

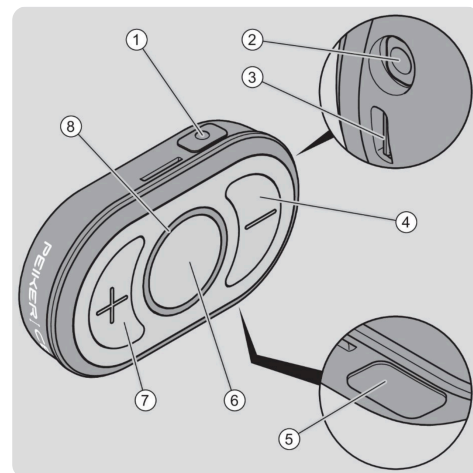

Good to know

- Once paired, unit and headset **reconnect automatically** whenever you switch the unit on.
- Want to use a **different** Bluetooth headset? Switch the current headset off first, then pair again as described above.
- If you plug in a **wired** headset while a Bluetooth headset is connected, the audio switches to the wired headset automatically. Unplug it and the audio returns to the Bluetooth headset.

Connection not working?

Possible causes:

- The headset **does not allow another pairing** because it is already connected to other devices. Check the headset manual for the maximum number of pairings.
- The headset **battery** is empty.

Then check:

- Is the headset really in **pairing mode**? On most headsets a blue light flashes.
- Follow the steps in the headset manual and try again from step 1.

Tip: earphones and headsets that match the CEECOACH Plus are at horse-watch.nl under **Instruction sets**.



More help & software

Scan the code for the full manuals (NL / EN / DE) and the latest CEECOACH software.

manuals.horse-watch.nl/ceecoach.html

● QUESTIONS? MESSAGE US

+31 (0)418 51 60 28

Call the same number or email info@horse-watch.nl · www.horse-watch.nl