



CEE COACH PLUS · EN


PAIRING NEW UNITS

Added a unit, or lost the connection? Here's how to make a group again in one minute.

Units that are paired together form a **group**: everyone hears everyone. Your units are already paired on delivery. You only need to pair when you add an **extra unit**, combine units from different sets, or after a reset. Always pair the **whole group at once**, including units that were already connected.

- 1 Put all units together**, within 10 meters, and switch them all **on** (main button 3 seconds).
Key lock on (four flashing LEDs)? Switch it off first: plus and minus together for 3 seconds.
- 2 On the first unit, press both function buttons at once**, the top button and the flat side button, for at least 1 second. The light ring starts to fill.
- 3 Do the same on every other unit, within 30 seconds**. All units with a filling ring now search for each other. Easiest in pairs: one unit each, press together on "now".
- 4 Wait until the ring is full**. You hear "Device connected" and the ring flashes **green**. Done: the units remember each other, even when switched off.
- 5 Quick test**. Talk into one headset and listen on another. Hear nothing? Check that the ring flashes green, not magenta (microphone off) or cyan (too far away).

STEP 2 · BOTH FUNCTION BUTTONS

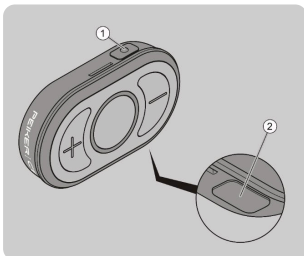

Press top button (1) and flat side button (2) at the same time.

THE LIGHT RING

Filling — pairing (30 seconds)
Flashing green — success, connected
Flashing white — failed, try again
Cyan — paired, but too far from the others
Magenta — microphone is off
4 LEDs flashing — key lock on

Making a new group

Want to combine other units? Follow the steps with exactly the units that belong in the new group. A unit is always in one group; the old pairing drops by itself.

Not working (ring flashes white)?

Move closer together, press faster one after the other, key lock off. Still failing? The units may have different software; call or message us. The Plus doesn't pair with CeeCoach 1 or 2.

● MESSAGE US

+31 (0)418 51 60 28

Call the same number
info@horse-watch.nl · www.horse-watch.nl



Full manual
All functions of the
CeeCoach Plus